

DESIG	DESIGN DRAWN E		DART AEROSPACE USA,	INC.
CHECK	KED 🚜	APPROVED #	DRAWING NO.	REV. A
	#	A	DSI 9343 sı	HEET 1 OF 1
DATE			TITLE	SCALE
06.07.12			D350-636-011/-012 SPACER	NTS
Α		06.07.12	NEW ISSUE	

DART SERVICE INSTRUCTION


TO AMEND DRAWING IIN-D350-636 REV. D REF. FAA STC: SR00646SE


REF. CANADIAN STC: SH99-7

WHEN INSTALLING THE APICAL P/N 20327-100 FWD FLOATS ONTO THE DART D350-636-011/-012 SKIDTUBES, INSTALL THE DART D3532-1 SPACER AS SHOWN IN SECTION A-A TO ALLOW CLEARANCE FROM THE FWD WEARPLATES.

ADD THE FOLLOWING PARTS TO THE PARTS LIST ON PAGE 10 AND 11 OF IIN-D350-636 REV D:

ltem	Qty -011	Qty -012	Qty -103	Qty -104	Part Number	Description
	Х				D350-636-011	SKIDTUBE INSTALLATION, LH, STD AERAZUR/APICAL CYLINDRICAL FLOAT COMPATIBLE
		Х			D350-636-012	SKIDTUBE INSTALLATION, RH, STD AERAZUR/APICAL CYLINDRICAL FLOAT COMPATIBLE
			Х		D350-636-103	APICAL FLOAT CONVERSION KIT, LH
				Х	D350-636-104	APICAL FLOAT CONVERSION KIT, RH
50	2	2	2	2	D3532-1	SPACER

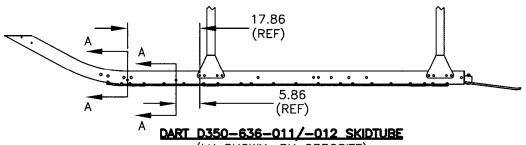

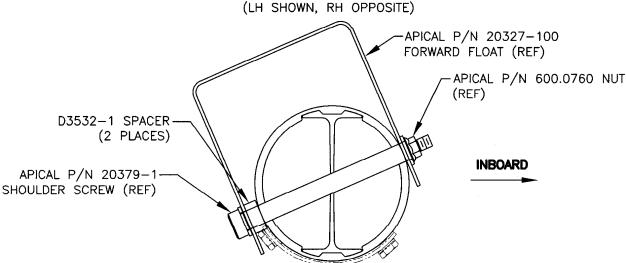

SECTION A-A: DART D350-636-011/-012 SKIDTUBE

(LH SHOWN, RH OPPOSITE)

Copyright @ 2006 by DART AEROSPACE USA, INC.

THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE USA, INC.